

尺寸：90*70mm
材质：128g铜版纸正反印刷，左右对折，亮面处理。

<div data-bbox="327 333 452 379" data-label="Text"><p>Eson^{STYLE}</p></div> <div data-bbox="327 389 680 421" data-label="Section-Header"><p>Smart Speaker User Manual</p></div> <div data-bbox="837 333 900 379" data-label="Text"><p>X9S</p></div> <div data-bbox="461 459 761 721" data-label="Image"></div>	<div data-bbox="1003 333 1137 357" data-label="Section-Header"><p>X9S Features</p></div> <div data-bbox="1003 364 1563 564" data-label="List-Group"><ol style="list-style-type: none">1. After connected "Wi-Fi", Interacting a speaker with voice.2. The smart speaker included Bluetooth functions.3. The speaker can be shared together by some users, two or more speakers can be controlled anytime, Free connected.4. The speaker has exclusive APP to play the cloud music, Such as daily music, Shrimp music.5. Log in your amazon account. The speaker can be control by networking appliance to choose the songs, news, shopping.6. The speaker can be wireless speakerphone function.</div> <div data-bbox="1003 571 1294 595" data-label="Section-Header"><p>Button instructions overview</p></div> <div data-bbox="1155 602 1402 746" data-label="Image"></div>	<div data-bbox="1675 333 2240 634" data-label="List-Group"><ol style="list-style-type: none">1. Smart voice button: On "Wi-Fi" mode, Short press to enter the voice prompt, On "Bluetooth" mode, Short press to answer/end a call, Long press for 2 seconds to reject a call.2. Volume reduce/previous song: Short press to Volume down, On "Bluetooth" mode, Long press to previous song3. Volume increase/next song: Short press to volume up, On "Bluetooth" mode, Long press to next song4. Multi-function button: Short press to switch "Bluetooth" and "Wi-Fi". On "Bluetooth" mode, Long press for 2 seconds, The current Bluetooth device will be disconnected. On "Wi-Fi" mode, Long press for 2 seconds to connect network, Long press about 10 seconds, the wifi will be restore factory setting.5. Pause/On/Off button: Long press for 3 seconds to turn on/off, On "Bluetooth" "Wi-Fi" mode, Short press to play/pause.</div> <div data-bbox="1675 651 2060 674" data-label="Section-Header"><p>Interfaces and Indicator light overview</p></div> <div data-bbox="1675 683 2217 746" data-label="List-Group"><ol style="list-style-type: none">1. Working Indicator light: "WIFI" mode for white light, "Bluetooth mode" for blue light2. Charge Indicator light: Red light3. Line port: External sound source</div>	<div data-bbox="2347 333 2486 351" data-label="Section-Header"><p>4. USB port: Change</p></div> <div data-bbox="2401 361 2844 571" data-label="Image"></div> <div data-bbox="2347 588 2562 611" data-label="Section-Header"><p>Operation instruction</p></div> <div data-bbox="2347 623 2894 749" data-label="Text"><p>On/Off: Long press for 3 seconds, White LED indicator blinking with "beep". On power on status, Long press for 3 seconds, Working indicator turn off with "beep".</p><p>Charge The speaker charged by micro USB cable, the red indicator blinking, Indicator will turn off when it fully charge.</p></div>	<div data-bbox="3019 333 3248 373" data-label="Text"><p>Charge voltage: 5.0V ±0.2 Charge adapter output current: 1A.</p></div> <div data-bbox="3019 385 3180 408" data-label="Section-Header"><p>Bluetooth mode</p></div> <div data-bbox="3019 420 3579 702" data-label="List-Group"><ol style="list-style-type: none">1. Short press "M" button on standby mode, blue indicator blinking, Switching to Bluetooth mode.2. Turn on your phone's Bluetooth mode to pair.3. Your phone's Bluetooth can be re-connected for previous paired speaker, blue indicator is on.4. On Bluetooth mode, Short press "ON" button to switch play or pause.5. Adjust volume: Short press "+" button to increase volume, Short press "-" button to reduce volume6. Change songs: Long press "+" button for 2 seconds to previous song, Long press "-" button for 2 seconds to reduce volume.7. Long press "M" button for 2 seconds to cancel connected Bluetooth device, Blue indicator blinking8. Turn on other Bluetooth device to pair.</div> <div data-bbox="3019 721 3095 744" data-label="Section-Header"><p>LINE IN</p></div>	<div data-bbox="4184 333 4247 379" data-label="Text"><p>X9S</p></div> <div data-bbox="3696 368 3799 403" data-label="Image"></div> <div data-bbox="3839 368 3942 403" data-label="Image"></div> <div data-bbox="3861 445 4085 637" data-label="Image"></div> <div data-bbox="3696 662 4238 691" data-label="Text"><p>The Bluetooth work mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by Shenzhen Eson Technology Co.,Ltd is unde license. Other brands names are the property of their respective owners.</p></div> <div data-bbox="4112 702 4247 746" data-label="Image"></div>
<div data-bbox="327 861 887 944" data-label="List-Group"><ol style="list-style-type: none">1. On power on mode, Connect 3.5mm Audio Cable and the speaker, Switch to Line in mode automatically, the white and blue indicator blinking together.2. Short press"+" "-" button to adjust the volume.3. Short press "on/off" button to play or pause.</div> <div data-bbox="327 956 448 979" data-label="Section-Header"><p>Wi-Fi Mode</p></div> <div data-bbox="327 989 842 1094" data-label="List-Group"><ol style="list-style-type: none">1. Turn on your cellphone WIFI, connected successfully with the wireless router, remember the password2. APP download address iOS: https://dlm.bz/l/eson/1.0.4725 Android: https://dlm.bz/a/eson/2.8.0.170825</div> <div data-bbox="327 1101 470 1125" data-label="Section-Header"><p>Scan & install</p></div> <div data-bbox="412 1132 560 1150" data-label="Text"><p>iOS system install APP</p></div> <div data-bbox="434 1159 542 1271" data-label="Image"></div> <div data-bbox="631 1132 801 1150" data-label="Text"><p>Android system install APP</p></div> <div data-bbox="667 1159 775 1271" data-label="Image"></div>	<div data-bbox="1003 861 1424 884" data-label="Section-Header"><p>Install the Android system app successful</p></div> <div data-bbox="1469 865 1559 958" data-label="Image"></div> <div data-bbox="1003 944 1326 968" data-label="Section-Header"><p>Turn on "App" installation steps</p></div> <div data-bbox="1003 979 1155 1250" data-label="Image"></div> <div data-bbox="1182 1260 1379 1278" data-label="Text"><p>Clicking the "Wi-Fi setup wizard"</p></div> <div data-bbox="1205 979 1357 1250" data-label="Image"></div> <div data-bbox="1402 979 1559 1250" data-label="Image"></div> <div data-bbox="1438 1260 1532 1278" data-label="Text"><p>Clinking"NEXT"</p></div>	<div data-bbox="1675 896 1827 1166" data-label="Image"></div> <div data-bbox="1675 1180 1850 1241" data-label="Text"><p>The APP Wi-Fi name is as same as your cellphone, please enter Wi-Fi password, Clinking the "Next" button</p></div> <div data-bbox="1881 896 2033 1166" data-label="Image"></div> <div data-bbox="1881 1180 2047 1241" data-label="Text"><p>Long press the speaker "M" button for 3 seconds till you can hear the voice prompts, Then clinking the "Next"</p></div> <div data-bbox="2074 896 2231 1166" data-label="Image"></div> <div data-bbox="2074 1180 2253 1226" data-label="Text"><p>The speaker will connect successful with voice prompts after about 1 minute</p></div>	<div data-bbox="2347 896 2499 1166" data-label="Image"></div> <div data-bbox="2347 1180 2495 1226" data-label="Text"><p>After device is connected to Wi-Fi successful, then clinking "Next" to switch</p></div> <div data-bbox="2540 896 2705 1166" data-label="Image"></div> <div data-bbox="2540 1180 2688 1226" data-label="Text"><p>The APP list is used to assign a smart speaker placement</p></div> <div data-bbox="2746 896 2903 1166" data-label="Image"></div> <div data-bbox="2746 1180 2871 1226" data-label="Text"><p>Entering the page, choosing other voice platform freely</p></div>	<div data-bbox="3019 896 3171 1166" data-label="Image"></div> <div data-bbox="3019 1180 3171 1226" data-label="Text"><p>Clinking "Sign in with Amazon" to log in your amazon account to switch</p></div> <div data-bbox="3216 896 3373 1166" data-label="Image"></div> <div data-bbox="3216 1180 3382 1226" data-label="Text"><p>Entering the Alexa account and password to access to Alexa service</p></div> <div data-bbox="3418 896 3575 1166" data-label="Image"></div> <div data-bbox="3418 1180 3584 1197" data-label="Text"><p>Sign in amazon successful</p></div>	<div data-bbox="3696 861 3933 884" data-label="Section-Header"><p>Amazon use instruction</p></div> <div data-bbox="3696 896 4256 1006" data-label="List-Group"><ol style="list-style-type: none">1. Log in Amazon successful, Interacting with a voice speaker. Short press "Microphone" button with voice prompt, then white LED indicator is on, Taking with Alexa freedom, The white LED indicator blinking fast, The speaker will ready to answer your questions.2. The speaker can be control with voice when it connected the smart home appliances.</div> <div data-bbox="3696 1017 3920 1041" data-label="Section-Header"><p>Product specifications</p></div> <div data-bbox="3696 1054 3933 1204" data-label="Text"><p>Wireless standard: 802.11b/g/n,1T1R Support: IOS/Android/Windows7/8 Bluetooth version: 4.2 Battery capacity: 3.7V 1000mAH Speaker Driver: 4 Ω 5W Charge time: 2h Network work time: about 4h</p></div>